


Use, Maintenance Instruction, Repair kit

Application:

Only use the **ProGrip** on balancers that meet the valid security policies. Please pay attention of use in the different fields of application!

ATTENTION

The handles of the ProGrip must not touch the rim.

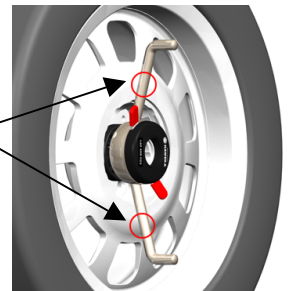

Care and cleaning the ProGrip

The mechanical synchronizing system must be regularly cleaned to ensure the long life of all components. If the **ProGrip** is full of dirt it may not grip the shaft correctly. The following steps will ensure that the **ProGrip** is in good working order:

- Disassemble the Pro-Grip as per the drawing
- Clean all parts carefully. We recommend a solvent based cleaner for the metal parts
- Make sure that all parts are free of grease or oil before you re-assemble the **ProGrip**
- Clean the **ProGrip** at regular intervals

**Repair Kit
Part No.
140e408 310**

Repair kit consisting of the above marked parts

