


**PRODUCT INFORMATION**

# ProGrip

## The quick nut

### Product description

It's hard to imagine wheel balancing technology today without the Pro-Grip quick nut.

With the ProGrip an optimized application on the wheel is achieved.

### Product features

- Made from light polyamide (PA)
- Functional design
- In different thread diameters available
- Also with handles available (optionally)



Application of the ProGrip on the wheel  
(in combination with QuickPlate and DuoExpert)

### Product overview

Description	Part no.
ProGrip Tr 40 x 3	143 403 003
ProGrip Tr 40 x 3 incl. handles	143 403 006
ProGrip Set Tr 40 x 3	124 403 000



ProGrip



ProGrip with handles



ProGrip Set


*Use, Maintenance Instruction, Repair kit*

**Example:**

Only use the **ProGrip** on balancers that meet the valid security policies.  
Please pay attention of use in the different fields of application!

Below are some of the different applications for the **ProGrip**

1. *Standard Pressure ring for ProGrip*
2. *Clamping hood complete small + Rubber cap (for steel rims)*
3. *Clamping hood large (for alloy rims)*
4. *Flange plate adaptors - QuickPlate*

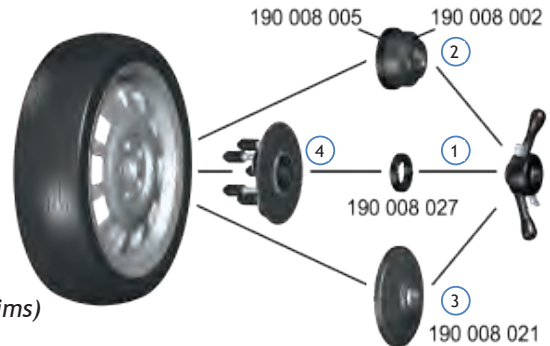

ATTENTION:

The handles of the **ProGrip** must not touch the rim as this type of pressure may damage the wing nut which may lead to fractures.



Care and cleaning the ProGrip

The mechanical synchronizing system must be regularly cleaned to ensure the long life of all components. If the **ProGrip** is full of dirt it may not grip the shaft correctly. The following steps will ensure that the **ProGrip** is in good working order:

- Disassemble the Pro-Grip as per the drawing
- Clean all part carefully. We recommend a solvent based cleaner for the metal parts
- Make sure that all parts are free of grease or oil before you re-assemble the **ProGrip**
- Clean the **ProGrip** at regular intervals

Repair kit 40x3  
Part-#: 141e403 310

Repair kit 40x4  
Part-#: 141e405 310

Repair kit



Repair kit consisting of the above marked parts.